

GLIMPSE™

extra video camera
For use with the 29890 Glimpse™



⚠️ WARNING:

THIS PRODUCT CANNOT REPLACE RESPONSIBLE ADULT SUPERVISION.

- **STRANGULATION HAZARD** - Children have STRANGLED in cords. Keep this cord out of reach of children (more than 3 feet (0.9 m) away from the crib). Use enclosed Security Clips to help secure cord away from baby's reach. Never use extension cords with AC Adapters. Only use the AC Adapters provided.
- When an AC Adapter is plugged into an electrical outlet, do not touch the exposed end.
- Test monitor before first use, periodically, and when changing location of the Camera.
- Do not use monitor near water (such as bathtub, sink, etc.).
- Keep monitor away from heat sources (such as stoves, radiators, etc.).
- Make sure there is proper ventilation around all monitor components. Do not place on sofas, cushions, beds, etc. which may block ventilation.
- This product is not a toy. Do not allow children to play with it.
- This product contains small parts. Adult assembly required. Exercise care when unpacking and assembling the product.



 
⚠️ BATTERY WARNING:

- Use only the original rechargeable battery provided. Please contact Summer Infant, Inc. for replacement battery. Contact information can be found on the back page of these instructions or on the battery itself.
- Do not short-circuit supply terminals.
- Only the recommended battery or equivalent are to be used, volts and size.
- Remove battery when product is stored for long periods of time or when battery is exhausted.
- Dispose of exhausted battery properly.
- Keep all batteries away from children.

CAMERA SET UP & USE

Adding a Camera


Make sure the power is on for the camera you would like to add. Press the **POWER/MENU** button to enter menu screen. Using the **DOWN** button, scroll to **ADD CAM** and press the **POWER/MENU** button to select. Using the **UP** or **DOWN** buttons, scroll to the camera number you would like to add and press **POWER/MENU** button to select. Press the **SYNCH** button on the back of the camera. Three bars will appear next to the camera icon to indicate that it is syncing.

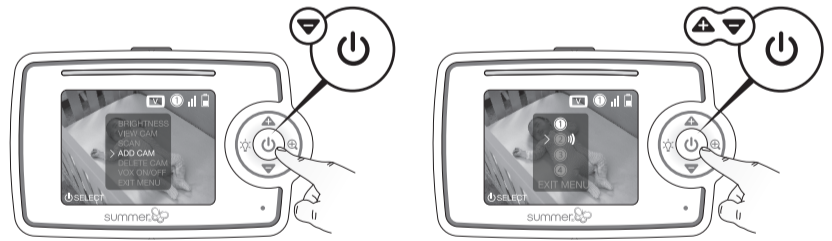


(Note: This product accepts up to 4 cameras and operates on audio and video auto-scan to view each camera on an 8-second rotation. To order an additional camera (item #29980), please contact our Consumer Relations Team by phone at: 401-671-6551 or via email at: www.summerinfant.com/contact for details.)

Selecting Camera to View

 Tap the **POWER/MENU** button to enter menu screen. Using the **DOWN** button, highlight **VIEW CAM** and press the **POWER/MENU** button. Use the **UP/DOWN** buttons to select an available camera (blue color indicates powered-on, within-range, or paired cameras). Press **POWER** button to confirm selection.

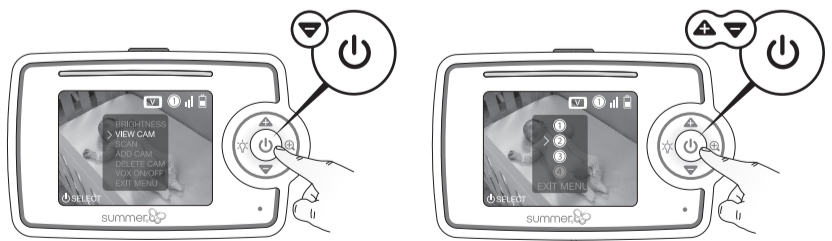

 
The video will appear on the handheld screen. Selected camera's view will appear on the handheld. An icon showing camera number will appear on the screen for 3 seconds. Camera number on indicator bar will change to selected camera.

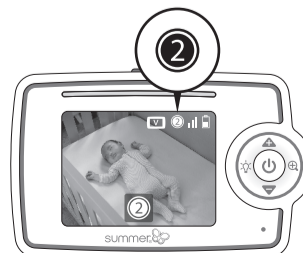

CAMERA SET UP & USE (continued)


Scanning Camera

 Press the **POWER/MENU** button to enter menu screen. Using the **DOWN** button, select **SCAN**, and press the **POWER/MENU** button. Scanning cameras will begin. It will cycle through each active camera every 8 seconds. To stop scanning, press the **POWER/MENU** button.

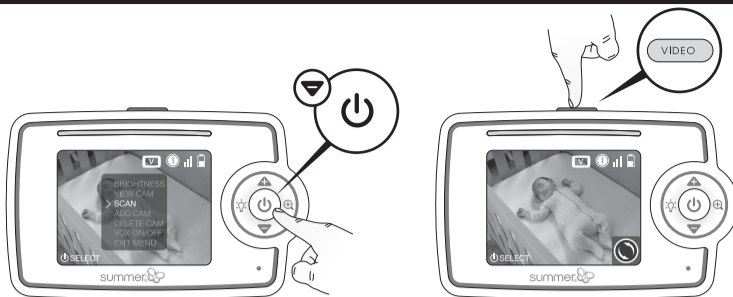

Deleting a Camera:

 
Press the **POWER/MENU** button to enter menu screen. Using the **DOWN** button, highlight **DELETE CAM**. Use the **UP/DOWN** buttons to highlight the camera you would like to delete. Press the **ENTER** button to delete that cam.

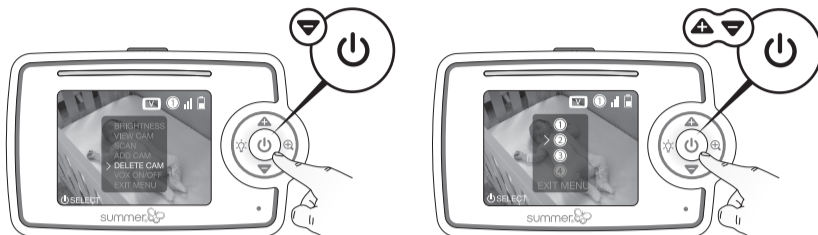

INSTALL THE CAMERA

Install the Camera


 
For best picture focus, place camera 6 to 8 ft. from crib. Plug in camera. Place camera on a flat surface, such as a tabletop, or shelf or mount the camera on a wall using the screw and wall anchor provided.

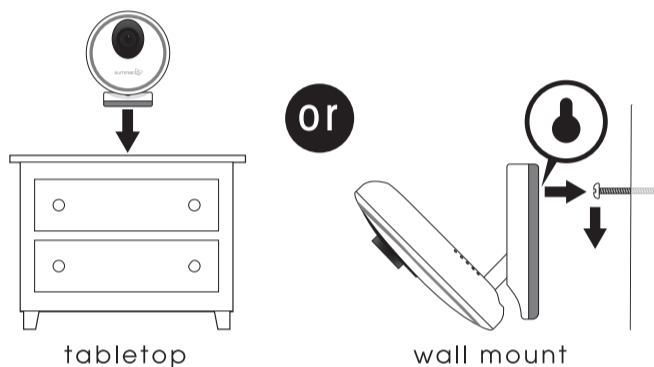

Secure the Camera Cord

NEVER place the camera or cords within 3-feet of the crib.

  Secure the cord to your wall using the 6 security clips included to keep the cord away from baby's reach.

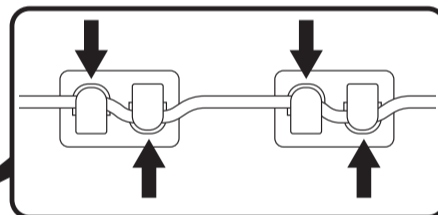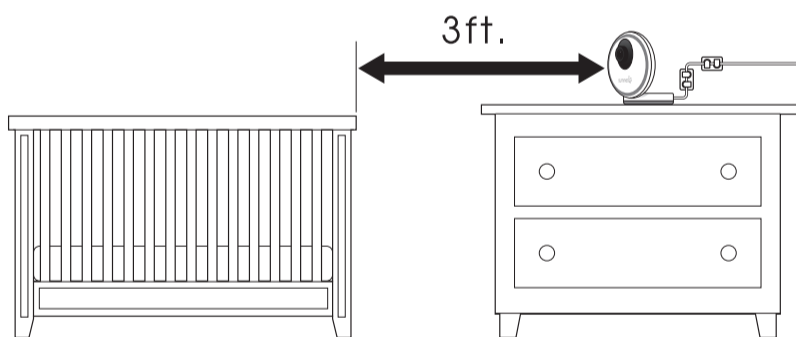

Read all warnings prior to using this product.

WARNING

STRANGULATION HAZARD: Children have strangled in cords. Keep this cord out of the reach of children (more than 3 ft. (0.9m) away).



If you experience a problem that is not noted in this manual, please do not return the product to the store. Our Customer Service Department may have a simple solution to your problem. Please contact us at 401-671-6551 or email us at summerinfant.com.

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by Summer Infant may void the users authority to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiver.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: 1. To comply with FCC RF exposure compliance requirements, a separation distance of at least 20 cm must be maintained between the antenna of this device and all persons. 2. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Summer Infant (USA), Inc. Monitor Warranty Policy

Summer Infant(USA), Inc. will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the unit is defective in workmanship or materials. To claim your repair/replacement, the product must be returned to Summer Infant along with a copy of the original purchase receipt. In the absence of the purchase receipt, the warranty will be 12 months from the date of manufacture. This warranty does not apply to normal wear or damage from misuse, abuse, improper storage and handling, installation, accident, unauthorized repair or alteration. Please contact our Customer Service Department by phone at 401-671-6551 or via e-mail at summerinfant.com/contact for details. For sale and use in the USA and Canada. The warranty is null and void if used outside its intended territory.



visit us at www.summerinfant.com

Summer Infant stands behind all of its products. If you are not completely satisfied or have any questions, please contact our Consumer Relations Team at 401-671-6551 or www.summerinfant.com. © 2017 Summer Infant (USA), Inc. Colors and styles may vary. Please retain information for future reference. **MADE IN CHINA.** 11/17

Summer Infant (USA), Inc.- 1275 Park East Drive | Woonsocket, RI | 02895 | 401-671-6551