

# BABY PIXEL<sup>®</sup> ZOOM HD™ DUO

5.0 inch high definition color video monitor

- SEE, HEAR, AND KNOW THAT BABY IS OK
- Moonlite<sup>®</sup> HD night vision boost
  - digital zoom
  - SleepZone<sup>®</sup> virtual boundary box
  - remote camera steering
  - digital privacy
  - talk-back to baby & temp display
  - lullabies/white noise & clock
  - up to 800 ft. range
  - VOX voice-activated screen wake-up


Keep this instruction manual for future reference. Please read the following instructions and warnings carefully.

## 1 SETTING UP THE CAMERA & HANDHELD SCREEN

### Charge the Handheld

Charge for 7 hours before first use. After the initial charge, recharge when necessary for 7 hours. We recommend charging overnight.


**NOTE:** While powered off, you will not see an indicator that the handheld is charging. LED will light up for 5 seconds to let you know it is charging, then shut off.

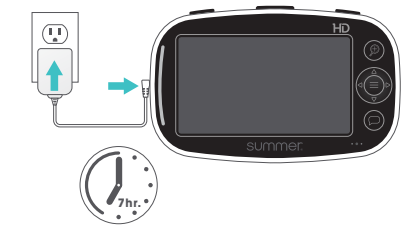

### Install the Nursery Camera


**NOTE:** For best picture focus, place camera 6 to 8 ft. from crib.

1. Plug in nursery camera.
2. Place camera on a flat surface, such as a dresser or shelf.
3. Or, mount the camera on a wall using the screw and wall anchor provided.

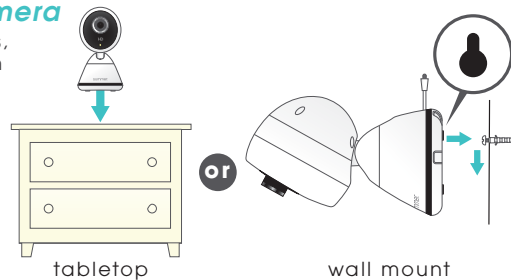

### Secure the Camera Cord


**NEVER** place the camera or cords within 3-feet of the crib. Secure the cord to your wall using the 6 security clips included to keep the cord away from baby's reach.

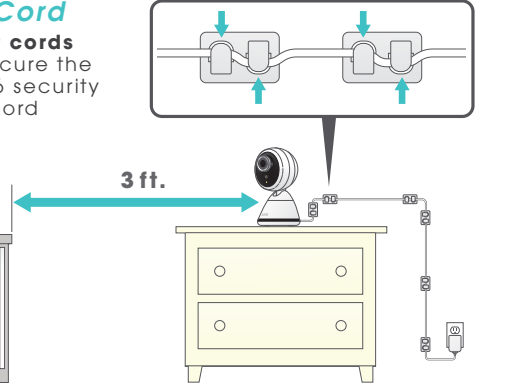

**Read all warnings prior to using this product.**

**WARNING**

STRANGULATION HAZARD: Children have strangled in cords. Keep this cord out of the reach of children (more than 3 ft. (0.9m) away in all directions).



## Power on the Nursery Camera & Parent Handheld

**1.** Press and hold the camera **POWER** button for 3 seconds on each camera. A small green indicator light will appear above the lens.



**2.** Press and hold the handheld **POWER** button for 3 seconds. The handheld will automatically sync with the camera.

**NOTE:** The handheld unit and the camera are synced at the factory for privacy reasons. (If the handheld and camera are not synced with each other for any reason, see "Adding a Camera" section.)

**Congratulations!** You are now ready to use your Baby Pixel<sup>®</sup> Zoom HD™ DUO!

## 2 GETTING TO KNOW YOUR HANDHELD

- ### Screen Icons
- AM/PM Time
  - Lullabies & White Noise
  - VOX
  - Zoom (6 levels)
  - Temperature
  - Camera Selection
  - Reception
  - Battery Life/Plugged In
- 

- ### Function Buttons
- SleepZone<sup>®</sup>
  - Power/Video
  - Moonlite<sup>®</sup>
  - Zoom
  - Volume
  - Menu/Select
  - Up/Down/Left/Right
  - Talk-Back
- 

## Menu Options

Press the **MENU/SELECT** button to access the menu options. Use the **LEFT/RIGHT ARROW** buttons to highlight the Menu items. Press **MENU/SELECT** to confirm a selection. To exit menu, tap the power button once. Menu also exits after 8 seconds of inactivity.

- VOX Menu
  - SleepZone<sup>®</sup> Menu
  - Camera Menu
  - Settings Menu
  - Lullabies/ White Noise Menu
- 

Flip out the kick-stand and place the monitor on a stable, level surface.



## 3 ADJUSTING THE HANDHELD SETTINGS

### Improve Reception

Flip up antenna to improve reception.



## Handheld Screen Brightness


1. Press **MENU/SELECT** button.
2. Press the **RIGHT ARROW** button to highlight the brightness icon.
3. Press **MENU/SELECT**.

4. Press the **RIGHT ARROW** button to highlight the brightness icon.
5. Press **MENU/SELECT**.



## Handheld Screen Brightness (Continued)

6. Press the **RIGHT/LEFT ARROW** buttons to adjust the screen brightness.
7. Press **MENU/SELECT** to confirm.



## Volume

Press **VOLUME** button to increase/decrease sound level.



## Temperature Display

1. Press **MENU/SELECT**.
2. Press the **RIGHT ARROW** button and highlight the Settings icon.
3. Press **MENU/SELECT**.

4. Press the **RIGHT ARROW** button to highlight the Temperature icon.
5. Press **MENU/SELECT**.



## Remote Camera Steering

Remotely control the camera angle from the handheld. Use the **UP/DOWN/LEFT/RIGHT ARROW** buttons to move the camera angle up, down, and side to side.



## Digital Zoom

1. Press the **ZOOM** button to zoom in.
- A zoom icon will appear briefly in the screen's bottom right corner.
- The zoom icon will appear at the top of the screen.
- There are 6 levels of zoom.



## Clock

1. Press **MENU/SELECT**.
2. Press the **RIGHT ARROW** button to highlight the Settings icon.
3. Press **MENU/SELECT**.

4. Press the **RIGHT ARROW** button and highlight the Clock icon.
5. Press **MENU/SELECT**.

6. Use the **LEFT/RIGHT/UP/DOWN ARROW** buttons to adjust time.
7. Press **MENU/SELECT** to confirm.



## 4 VIEWING YOUR BABY

For additional cameras, see "Adding and Viewing Cameras".

## Virtual Boundary Box

The SleepZone<sup>®</sup> feature creates a virtual boundary box within your screen. This feature alerts you with a sound on your handheld if baby crosses the virtual boundary or an object enters the boundary area you've set.

1. To activate, press the **SleepZone<sup>®</sup>** button (automatically set to a default area).
2. To adjust the baby boundary area, press and hold the **SleepZone<sup>®</sup>** button for 3 seconds.




- Adjust the camera view with the **UP/DOWN/LEFT/RIGHT ARROW** buttons.
- Use the **ZOOM** button to bring the image closer.
- Press **MENU/SELECT** to confirm.

- Adjust the size of the **SleepZone<sup>®</sup>** with the **LEFT/RIGHT ARROW** buttons.
- There are two box size options to choose from.

You can also access SleepZone<sup>®</sup> feature through the MENU.

1. Press **MENU/SELECT** button to enter the menu screen.
2. Press the **RIGHT ARROW** button to highlight SleepZone<sup>®</sup>, and press **MENU/SELECT** button to confirm.


To extend battery life, we recommend plugging in your handheld while using the SleepZone<sup>®</sup> feature.



## Video On/Off Power Save Mode

This feature helps conserve battery life by automatically turning off the screen when the handheld is not plugged into an A/C adapter (after 2 minutes, or 30 seconds if VOX or SleepZone<sup>®</sup> is on).


1. To turn VIDEO OFF and conserve battery power, press the **POWER/VIDEO** button.
  - The screen will go dark.
  - The audio feature will remain activated, allowing you to monitor sounds.
  - If VOX feature is on, video will turn on automatically when sound is detected.
2. To turn VIDEO ON, press the **POWER/VIDEO** button.



## 5 HEARING & SOOTHING YOUR BABY

### Sound-Activated Lights

The LED light bar on the side of the handheld will light up as it picks up noises, even in power save mode. (When the battery is low, the first LED flashes red and the handheld beeps.)



### Talk-back to Baby

Reassure and soothe baby with the sound of your voice and the press of a button.

1. Press and hold the **TALK-BACK** button to talk to your baby. The talk-back icon will appear briefly in the screen's bottom right corner.
2. Release the button to end talk-back mode.



## Voice-Activated Screen Wake-up (VOX)

The VOX feature, when on, will turn on your screen when it is in power save mode and the camera picks up a sound.

1. Press the **MENU/SELECT** button to enter menu screen.
2. Use the **LEFT ARROW** button to highlight the VOX icon and press **MENU/SELECT**.

3. Press the **LEFT/RIGHT ARROW** buttons to highlight VOX on or VOX off.
4. Press **MENU/SELECT** to confirm. The VOX icon will appear at the top of the screen.

**NOTE:** When VOX feature is on, VOX is temporarily suspended when lullabies/white noise are in use. VOX reactivates when lullabies/white noise turn off.

## Lullabies and White Noise

1. Press the **MENU/SELECT** button to enter the menu screen.
2. Press the **RIGHT ARROW** button to highlight Lullabies and White Noise icon.
3. Press **MENU/SELECT**.

4. Press the **LEFT/RIGHT ARROW** buttons to select a different lullaby or white noise. Press **MENU/SELECT**.



## Additional Features

• A lullaby/white noise will play. The lullaby icon will appear at the top of the screen. Once you choose the lullaby or white noise sound that you like, this will remain the active sound until you make a different selection.

• Lullabies/white noise can be turned on and off by pressing the button on the back of the camera.

**NOTE:** Lullabies/white noise will turn off automatically after 20 minutes. Lullabies/white noise can also be turned off through the lullabies/white noise menu.

1. Navigate to the lullabies/white noise menu.
2. Press the **RIGHT ARROW** button to select the No Sound icon.
3. Press the **MENU** button.



