

WASH & CARE INSTRUCTIONS:

To clean: Wipe clean with a damp cloth.



visit us at www.summerinfant.com

Summer Infant stands behind all of its products. If you are not completely satisfied or have any questions, please contact our Consumer Relations Team at **1-800-268-6237** or www.summerinfant.com/contact (For Europe call +44 (0)144 250 5000 or customerserviceuk@summerinfant.com)

connect with us:   

Summer Infant, Inc.
1275 Park East Drive
Woonsocket, RI 02895 USA
1-800-268-6237
©2016 Summer Infant, Inc.

Summer Infant Europe, Ltd.
1st Floor, North Wing
Focus 31, Cleveland Road
Hemel Hempstead, HP2 7BW UK
0144 250 5000

MADE IN CHINA.
Colors and styles may vary.
Please retain information
for future reference.

10/16



91410

Please read the following instructions and warnings carefully.

IMPORTANT! KEEP FOR FUTURE REFERENCE

Tools required: Phillips head screwdriver (not included).

Requires 3 "AA" batteries (included).


Adult assembly required.

For technical support, call **1-800-268-6237**, or e-mail at customerservice@summerinfant.com

In Europe, call **+44 (0) 144 250 5000**, or e-mail us at customerserviceuk@summerinfant.com

For use with children from birth and up.

Keep small parts away from children.

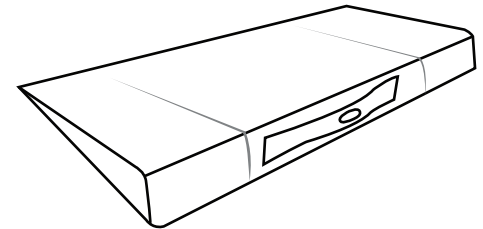


INSTRUCTION MANUAL

Good Vibes™ Vibrating Crib Wedge

Thank you for purchasing the Good Vibes Vibrating Crib Wedge from Summer Infant. The Good Vibes was designed to provide both comfortable incline and soothing vibration to help little ones fall asleep and stay asleep, especially when transitioning from inclined sleepers to the crib.

⚠️ WARNING:

- NEVER use product on top of or under a crib sheet.
- NEVER use product on top of a crib mattress.
- Product should only be used under a crib mattress.
- To prevent rolling or sliding, only the child's back or head should be elevated.
- Do NOT use crib wedge while folded. Crib wedge must be fully open and flat during use under mattress.

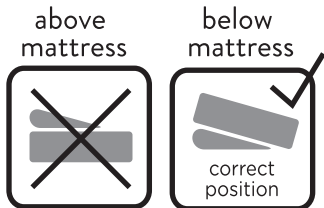


⚠️ BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard, or rechargeable batteries.
- Remove batteries when product is stored for long periods of time or when batteries are exhausted.
- Dispose of exhausted batteries properly.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.

TO USE:

Product will arrive folded in box. Do NOT use crib wedge while folded. Crib wedge must be fully open and flat during use under mattress. This product is intended for use under crib mattresses only.

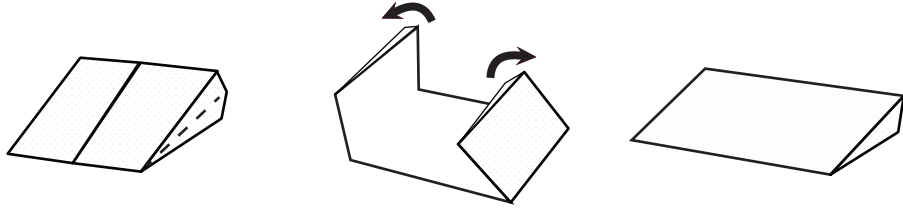

NOTE: Batteries are included for the “Try Me” mode. To activate the normal play mode, move switch to any of the three timer positions. When in “Try Me” mode, each function will automatically shut off after 10 seconds.

Power/Timer Control:

The main on/off/timer switch can be found next to the battery door on the bottom of the unit.

Open the pocket to locate the switch.

Turn switch to the “Off” position

during long periods of inactivity.

ON/OFF/TIMER CONTROL:

1st position: “Try Me” mode

2nd position: Off

3rd position: On / 15 min auto shut-off


4th position: On / 30 min auto shut-off

5th position: On / 45 min auto shut-off

PLACEMENT IN CRIB:


Step 1:

Place product under head of crib mattress. Product is not intended for use on top of crib mattress.

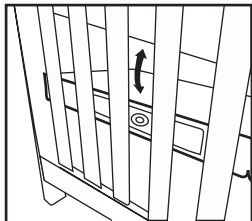


Step 2:

Unfasten hook and loop closures on power button handle and pull one end of handle through crib slats.

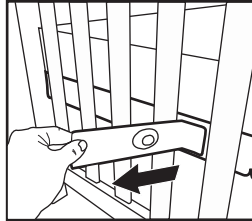

Step 3:

Wrap handle around crib slats and refasten hook and loop closures.

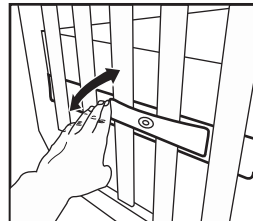

TO USE:

Vibration:

Adjust the level of vibration with the button located on the “Easy-Access” handle. Press the button once for low vibration, twice for medium vibration, and three times for high vibration. Once you make a decision, the vibration will play the selected amount of time before shutting off automatically. You can turn off the vibration feature manually by cycling through all three options and then pressing the button once more.

Low Vibration


Press once

Medium Vibration

Press twice

High Vibration


Press three times

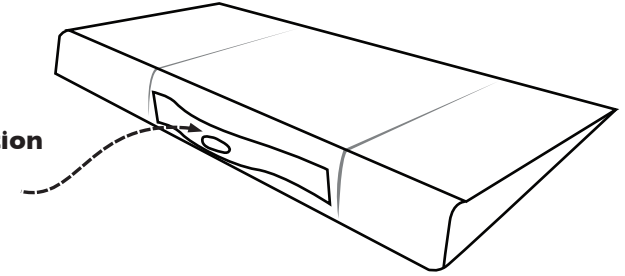

TO CHANGE BATTERIES:


Step 1:

Open pocket on bottom of unit.

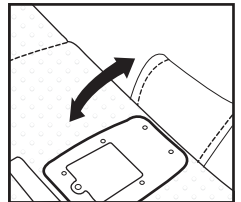


Step 2:

Use a Phillips head screwdriver to loosen battery door screw. Open battery door. Remove old batteries and dispose of them safely.

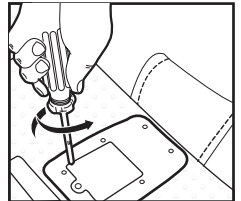


Step 3:

Insert 3 new “AA” batteries, making sure that the “+ and -” are facing the correct way. The battery compartment is marked for clarity.

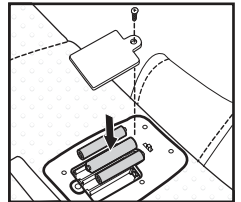

Step 4:

Screw battery door back onto unit. Make sure the On/Off Switch is in one of the three “On/Timer” positions and secure pocket.

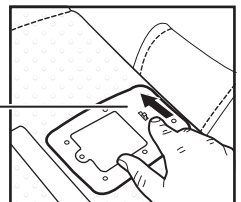

On/Off/Timer Switch